


Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar  
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Piese de schimb - Запасные части - 备件

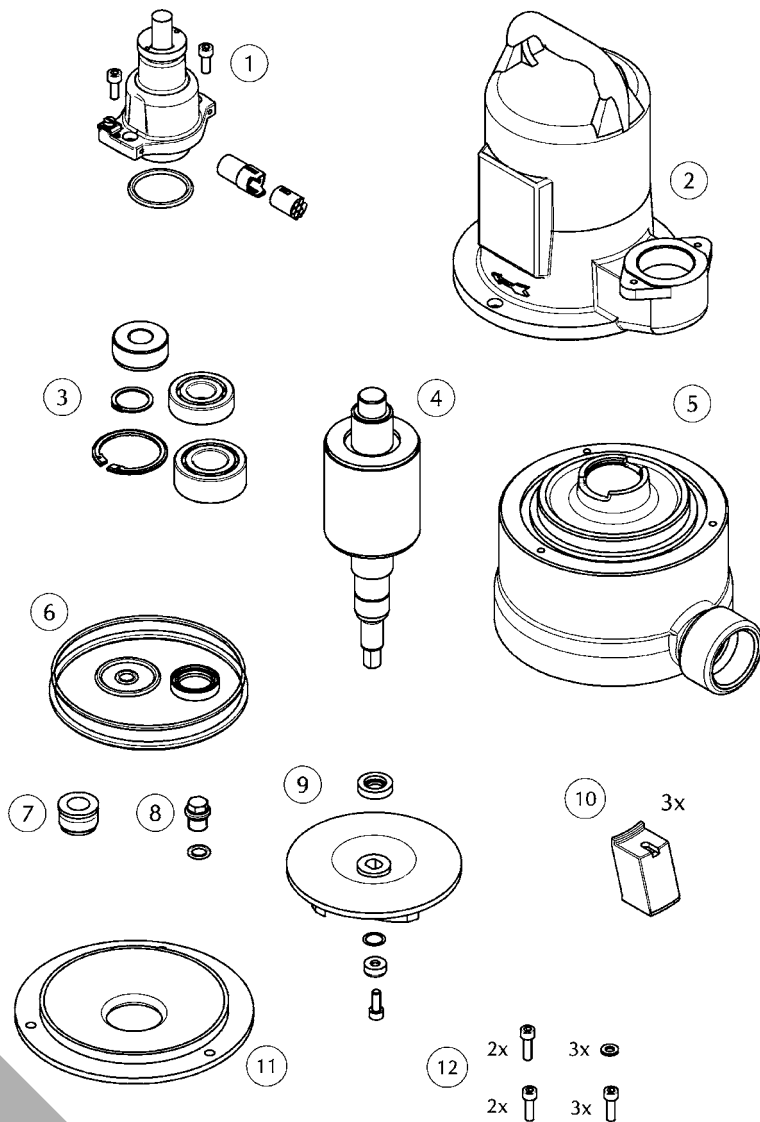

①	Leitung	Cable	
	US ... E, EX		<b>JP46225</b>
	US ... D, EX		<b>JP45469</b>
②	Stator + Gehäuse	Stator + Housing	
	US 73 D, EX		<b>JP47854</b>
	US 73 E, EX		<b>JP47855</b>
	US 103 D, EX		<b>JP47856</b>
	US 103 E, EX		<b>JP47857</b>
③	Lagersatz	Bearing set	<b>JP47862</b>
④	Rotorwelle	Rotor shaft	
	US 73 D, EX		<b>JP47858</b>
	US 73 E, EX		<b>JP47859</b>
	US 103 D, EX		<b>JP47860</b>
	US 103 E, EX		<b>JP47861</b>
⑤	Pumpengehäuse	Pump casing	<b>JP47864</b>
⑥	Dichtungssatz	Seal set	<b>JP46829</b>
⑦	Gleitringdichtung	Mechanical seal	<b>JP46043</b>
⑧	Ölschraube	Oil screw	<b>JP46046</b>
⑨	LaufRad	Impeller	
	US 73, EX		<b>JP46052</b>
	US 103, EX		<b>JP46053</b>
⑩	Füße	Pedestal	<b>JP46047</b>
⑪	Gehäusedeckel	Housing cover	<b>JP46050</b>
⑫	Schraubensatz	Screw set	<b>JP47863</b>
⑬	1l Öl	1l Oil	<b>JP48236</b>