



**BASICLOGO BD ... XM - BASICLOGO BD ... EXM**

Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar  
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Piese de schimb - Запасные части - 备件

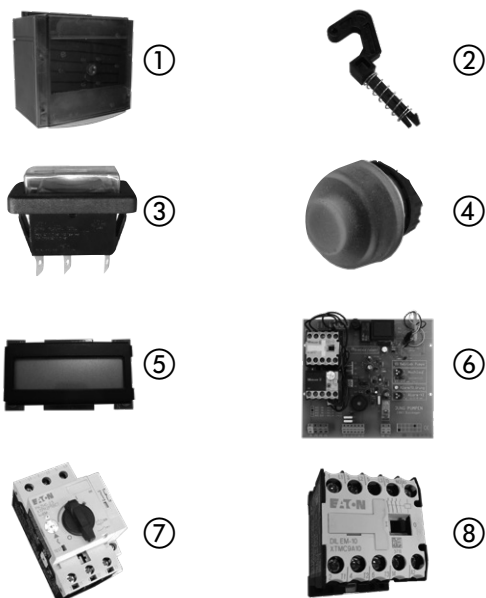

① Gehäuse ADP	Housing ADP	<b>JP47692</b>
② Scharnier	Hinge	<b>JP48310</b>
③ Wippschalter	Switch, 3 positions	<b>JP47783</b>
④ Taster	Button	<b>JP48309</b>
⑤ Betriebsstundenzähler	Operation hours counter	<b>JP47672</b>
⑥ Gedruckte Schaltung	PCB	<b>JP47734</b>
⑦ Motorschutzschalter	Protective motor switch	
	2,5-4 A	<b>JP47753</b>
	4-6,3 A	<b>JP47754</b>
	6,3-10 A	<b>JP47755</b>
⑧ Schütz DIL EM 10	Contactor EIL EM 10	<b>JP47671</b>

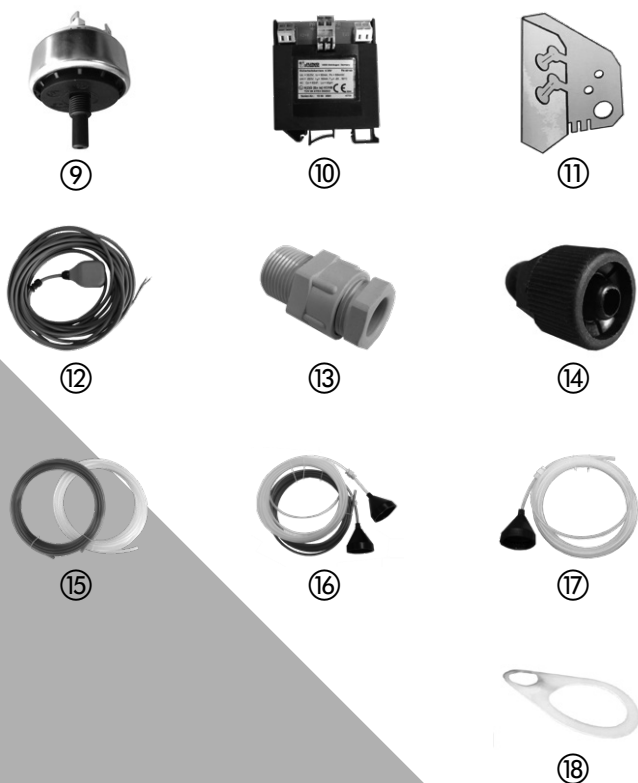

Niveaugeber	Level detector	
⑨ Druckschalter 100/50	Pressure switch	<b>JP47699</b>
⑩ Sicherheitsbarriere	Safety barrier ATEX	<b>JP46348</b>
⑪ TLS Halter		<b>JP46456</b>
⑫ TLS Tauchschalter 9,5m		<b>JP48304</b>
	TLS Tauchschalter 15 m	<b>JP48873</b>
	TLS Tauchschalter 20 m	<b>JP47771</b>
	TLS Tauchschalter 30 m	<b>JP47772</b>
⑬ 2x Schlauchbefestigung	2x Hose fastening	<b>JP48141</b>
⑭ 2x Verschraubung	2x Hose connector	<b>JP48142</b>
⑮ 2x Schlauch, 10m	2x Hose, 10m	<b>JP48143</b>
	2x Schlauch, 15m	<b>JP48144</b>
	2x Schlauch, 20m	<b>JP48145</b>
	2x Schlauch, 30m	<b>JP48840</b>
⑯ Luftglockenset, 10m	Pressure sensor set, 10m	<b>JP48148</b>
⑰ Luftglocke m Schlauch, 10m	Press. sensor w hose, 10m	<b>JP47698</b>
⑱ 20x Fangflasche	20x Catch hanger	<b>JP46904</b>