



# The ease of replacement

Guide rail systems are used where sewage pumps are installed in stationary applications. Thanks to the easy location of the pump by means of the guide rail system it is not necessary to enter the sump.

The pump slides down the guide rails into the sump and connects automatically to the discharge pipe. Maintenance and pump replacement is carried out by raising the pump along the guide rails out of the sump by means of a lifting chain.

The replacement of another manufacturer's pump by a reliable waste water pump from Jung Pumpen used

to involve considerable effort as not every pump can be directly connected via the existing guide rail system.

Thanks to the **Pentair Jung Pumpen guide rail adapter**, this problem is now in the past. We can supply suitable adapters for most makes of pump which means that connection of a Jung Pumpen pump to the existing guide rail system is easily carried out.

Select the appropriate adapter from the following tables and you can easily replace the existing waste water pump with a Jung Pumpen pump.

#### PUMP REPLACEMENT IN THE BLINK OF AN EYE



Remove old pump



Fit the adapter to the Jung Pumpen pump



Select the adapter which is suitable for the existing guide rail system



I Couple the pump to the guide rail







### SEWAGE PUMPS MULTICUT WITH CUTTING SYSTEM

The following guide rail adapters are currently available as standard

Manufacturer	Adapter /		Can be combined with MultiCut
ABS Piranha		JP 40648	
WILO EMU FA	(°, ●°, °)	JP 41814	
Flygt MP 3000	929		08/2 M, Ex
		JP 41151	20/2 M plus, Ex
Flygt Compit Sump +			35/2 M, Ex
MH 3000		JP 40540	36/2 M, Ex
KSB Amarex, DN40	0000		45/2 M, Ex
		JP 40646	75/2 M, Ex
KSB Amarex, DN 32 in-	000		76/2 M, Ex
clined position of Jung Pumpen pump		JP 41816	
Kordes		JP 41815	

## SPECIAL VERSIONS

If the customer needs an adapter which has not yet been manufactured or is unclear as to the type needed, he can enter the relevant data in the check list (see last page). Alternatively the old bracket can of course be sent to Jung Pumpen for clarification..



Further adapters are available on request!

#### SEWAGE PUMPS MULTISTREAM/MULTIFREE

These pumps with vortex and single-channel type impellers are supplied with the following hole circle diameters.

Nominal	Hole circle		Number of bolt		Bolt size	
	PN 6	PN 10	PN 6	PN 10	PN 6	PN 10
DN 65	130	145	4	4	M12	M16
DN 80	150	160	4	8	M16	M16
DN 100	170	180	4	8	M16	M16
DN 150	225	240	8	8	M16	M16

All sewage pumps of the MultiFree and MultiStream series have standard flange dimensions complying with PN6/PN10 standard in accordance with DIN EN 1092-1.

This means that the connection to a competitor's guide rail system can often be carried out without the need to buy an adapter. There are however some exceptions to this.

## Check list -Know what it is all about

If no ready-made adapter is available (as per previous page) then we can make a suitable adapter for your current guide rail system. Please complete the check list below as much as possible and fax it to the fax number **+49 5204 17-107** or per E-Mail **info@jung-pumpen.de**. Please also include your full address to allow us to contact you.




Brand/Manufacturer:	e.g. ABS, Flygt
Pump type/Description	
Discharge connection DN / PN	z.B. DN 100/PN 6
Code No.	
Perfomance:	
Delivery head H <sub>max</sub> =	[m]
Flow rate Q <sub>max</sub> =	[l/s]
Power =	[KW]
Single unit	Please mark with a cross
Duplex unit	Please mark with a cross
Bracket dimensions – Bolt circle – Faster	ning:
Bracket with thread	Please mark with a cross
Number of threaded holes:	
Klaue mit Durchgangsloch	Please mark with a cross
Number of straight holes:	

SEND OFF			



If there are a number of holes please indicate pattern of holes.

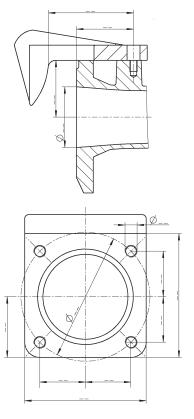

Please enter dimensions if available.

